

SE-0302 ELECTRONIC DEFENSE WHISTLE

Ultra-bright light and emergency alarm

BATTERY INSTALLATION:

- Unscrew the battery cover on the back.
- Follow the marked polarity instructions to install 3 x LR44/AG13 button cells (included).
- Replace the cover gently.

OPERATION:

- Clip the Electronic Defense Whistle to your backpack, purse, bag or apparel.
- Press the “☀” button once to steadily illuminate the bright LED light
- Press it again to make the LED flash on and off.
- Press the button a third time to turn the light off.
- Press the “🔔” button to activate a high-pitched warning signal. The alarm will continuously sound as long as the button is depressed.
- Release the button to disarm the whistle.

NOTES:

- If the alarm sound or the LED light luminance becomes weak, battery power is poor. The batteries should be replaced promptly.
- While this is a water resistant product, it is NOT to be used in the rain, underwater or in extremely wet conditions.
- Ensure the unit has good battery power to operate as a security guard. Check its power level periodically.

WARNING:

- The high-pitched alarm may injure one's hearing if the alarm is in close proximity to the ears.
- Do not look directly at the white LED light. Long exposure may lead to eye damage.
- This product contains small parts and is not suitable for small children.

DISCLAIMER:

All Doberman Security items are strenuously tested by our experienced R&D teams. Doberman, however, does not guarantee that this item will prevent all theft and/or attacks from occurring. This item is only meant to act as an alarm in emergency situations.

LIMITED WARRANTY COVERAGE:

If your product does not work properly because of a defect in materials or workmanship, 'Doberman (collectively referred to as "the warrantor") will, for the length of the period as follows, which starts with the date of original purchase ("warranty period"), replace it with a new or a refurbished product.

Product	Parts	Services
All Doberman Brand Products	Ninety (90) Days	Mail-in

During the parts warranty period, there will be no charge for Parts. You must first email acquiring a RMA number, and then mail-in your product during the warranty period. Non-rechargeable batteries are not warranted. This warranty only applies to products purchased and serviced in U.S.A./CANADA

The warranty is extended only to the original purchaser of a new product, which was not sold "as is". A purchase receipt or other proof of the original purchase is required for warranty service.

For assistance in U.S.A./CANADA, please visit our Website at: http://www.dobermanproducts.com or, send your request by E-Mail to: sales@dobermanproducts.com
--

LIMITED WARRANTY LIMITS AND EXCLUSIONS:

The Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, miss-adjustment of consumer controls, improper maintenance, power line surge, lighting damage, modification, rental use of the product, serviced by anyone other than a factory service center or other unauthorized service, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, LOSS OF GOODWILL, PROFITS OR REVENUE, LOSS OF USE OF THIS PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF SUBSTITUTE EQUIPMENT, DOWNTIME COSTS, OR CLAIMS OF ANY PARTY DEALING WITH BUYER FOR SUCH DAMAGES.

(As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, travel to and from the service provider. The items listed are not exclusive, but are for illustration only.)

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusions or limitations of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have others rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or service center. If the problem is not handled to your satisfaction, then write to the warrantor's Customer Services Department.

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

©2005, Doberman Security Products, Inc.
3002 Dow Avenue, Suite #408
Tustin, CA 92780 USA
Email: customerservice@dobermanproducts.com
Internet: www.dobermanproducts.com